


Loading Welcome and Transaction Advertisements via USB

For WinCE 7.0 Board

Creating the Welcome Advertisement and File Structure

1. Advertisements must meet certain requirements to be compatible with the ATM. (See Pg.3 For Supported Image Format)
 - a. Images must be specific per Image Resolutions.
 - b. Images must be .jpeg
 - c. Images cannot exceed 72 DPI
 - d. Images must be named Adv_0X (X indicates the number of the Graphic, it can be any number between 1 – 6)
2. Create the file structure as follows:

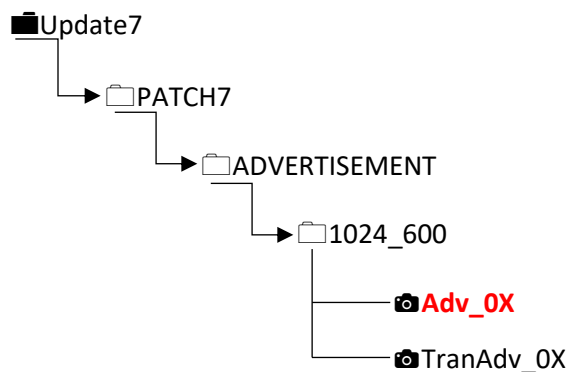


3. After creating the structure and adding your graphic into the structure based on step 2 copy the UPDATE7 folder to the root directory of a USB Thumb Drive.

Creating the Transaction Advertisement and File Structure

1. Advertisements must meet certain requirements to be compatible with the ATM. (See Pg.3 For Supported Image Format)
 - a. Images must be specific per Image Resolutions.
 - b. Images must be .jpeg
 - c. Images cannot exceed 72 DPI
 - d. Images must be named TranAdv_0X (X indicates the number of the Graphic, it can be any number between 1 – 6)

2. Create the file structure as follows:

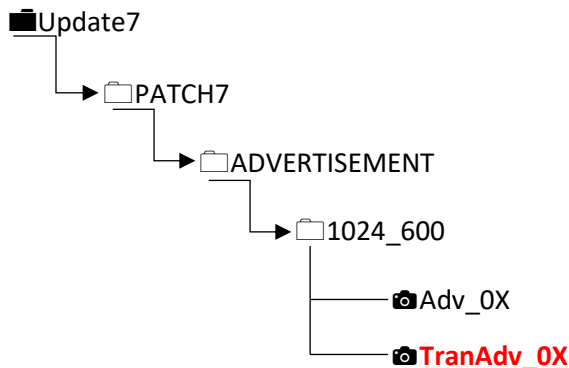

3. After creating the structure and adding your graphic into the structure based on step 2 copy the UPDATE7 folder to the root directory of a USB Thumb Drive. If you are also adding a Transaction Advertisement these two jobs can be done together at the same time, the Transaction Advertisement will be put alongside the Welcome Advertisement in the previous File Structure.

Downloading the Transaction and Welcome Advertisements To The ATM From A USB Device

1. At the ATM insert the USB Thumb Drive into the USB port located on the I/O Board
2. Log into the Operator Functions menu
3. Go To System Setup → System Control
4. Choose the Option For “Software Update”
5. Then ATM will then begin loading the update from your USB device. Please continue to wait and DO NOT REMOVE your USB device until the ATM has loaded the images, rebooted, and is at an idle state again.

Enabling the Welcome Advertisement

1. Log into the Operators Functions menu
2. Go To Customer Setup → Advertisement → Welcome Advertisement

Via this section you can choose the desired timer time for the Welcome Advertisement, Enable or Disable each loaded Welcome Advertisement, and preview each one.

Enabling the Transaction Advertisement

1. Log into the Operators Functions menu
2. Go To Customer Setup → Advertisement → Transaction Advertisement

Via this section you can choose the desired timer time for the Transaction Advertisement, Enable or Disable each loaded Transaction Advertisement, and preview each one.

► Supported Image Format

The following table describe the supporting format of welcome advertisement / background image

| Model | Image Size | DPI | Color | File Format | Max Size (one image) |
|---|------------|-----|-------------|-------------|----------------------|
| NH-1800SE MX-4000W | 800 X 600 | 72 | 24bit color | JPEG | 500KB |
| NH-2700(T) MX-5000SE NH-2600 MX-2600SE | 1024 X 600 | | | | |
| MX-5200SE MX-5300SE MX-2800SE | 1024 X 768 | | | | |

The following table describe the supporting format of transaction advertisement image

| Model | Image Size | DPI | Color | File Format | Max Size (one image) |
|--|------------|-----|-------------|-------------|----------------------|
| NH-1800SE MX-4000W | 690 X 180 | 72 | 24bit color | JPEG | 160KB |
| NH-2600 NH-2700(T) MX-5000SE MX-2600SE MX-5200SE MX-5300SE MX-2800SE | 753 X 225 | | | | |

If you have issue with this procedure please feel free to contact the Nautilus Hyosung America, Inc
Technical Support team at 877 – HYOSUNG (877-496-7864).